

# BALL FLOAT STEAM TRAPS HIGH CAPACITY **GE** WCB

#### **BALL FLOAT**

Its operating principle is based on the different density between steam and condensate. A float through a simple lever mechanism opens or closes the valve according to the condensate level in the trap. Air discharge is ensured by a thermostatic element.



#### **MAIN FEATURES**


Continuons discharge. Discharge of condensate at steam temperature. Simple and reliable construction. It does not withstand waterhammer. Suitable on superheated steam

#### **APPLICATIONS**

- ☐ Heat exchangers☐ Heater batteries
- ☐ Pans
- □ Drying cilinders
- ☐ Ovens

FLANGED

#### **DISCHARGE CAPACITY**

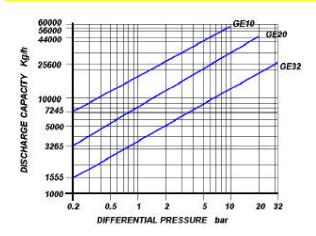

Cold water capacities are 2 to 4 times greater than the above . Safety factor = 1.2-1.5


SIZES	
3"-4"	
CONNECTIONS	

LIMITING CONDITIONS (according to ISO 6552)					
Steam Trap rating	ANSI 300				
PMA: Max allowable pressure	50 bar				
TMA: max allowable temperature	350°C				
PMO: max working pressure	40 bar				
TMO: max working temperature	300°C				
Max. Differential pressure (GE 10)	10 bar				
Max. Differential pressure (GE 20)	20 bar				
Max. Differential pressure (GE 32)	32 bar				

Douglas Italia reserves the right to carry-out any necessary modification without prior notice


ANSI B16.5 / UNI / DIN

## BALL FLOAT STEAM TRAPS HIGH CAPACITY **GE** WCB

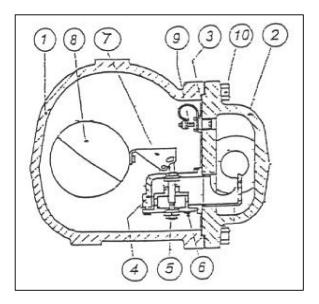

POS.	DESCRIPTION	MATERIALS	SPARES
1	Body	ASTM A216 WCB	
2	Cover	ASTM A216 WCB	
3	Gasket	316 / GRAPHITE	X
4	Seat	AISI 316	X
5	Valve	AISI 316	X
6	Screws	STAINLESS STEEL	X
7	Lever	AISI 316	X
8	Ball float	AISI 316	X
9	Air vent	STAINLESS STEEL	
10	Bolts	ASTM A193 B7	

Size (inches)	S	A	В	С	Weight (Kg)
3"	370	590	295	245	90
4"	402	590	295	245	98

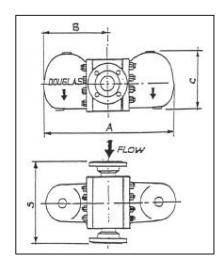

#### **INSTALLATION**

The steam trap must be fitted with the float arm in a horizontal plane so that it rises and falls vertically with the flow direction indicated on the body.

#### **HOW TO SERVICE**

By installing a new mechanism assembly (4),(5),(6),(7), if necessary also a ball float (8) and a thermostatic air vent (9), you can bring the steam trap to the "as new from factory "condition. This operation is carried out without removing the trap from yhe pipeline. Always fit a new gasket (3) when reassembling.

How to order: i.e. GE 20 WCB

### **DOUGLAS ITALIA S.p.A** Località Pradaglie – 29013 CARPANETO PIACENTINO ( PC )

OFFICIAL WEB SITE: www.douglas-italia.com