

BALL FLOAT STEAM TRAPS GD WCB

BALL FLOAT

Its operating principle is based on the different density between steam and condensate. A float through a simple lever mechanism opens or closes the valve according to the condensate level in the trap. Air discharge is ensured by a thermostatic element.




MAIN FEATURES

Continuons discharge. Discharge of condensate at steam temperature. Simple and reliable construction. It does not withstand waterhammer. Suitable on superheated steam

APPLICATIONS

- Heat exchangers
- Heater batteries
- Pans
- Drying cilinders
- Ovens

DISCHARGE CAPACITY

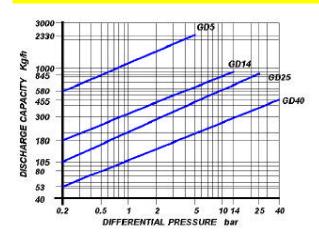

Cold water capacities are 2 to 4 times greater than the above . Safety factor = 1.2 - 1.5


SIZES 1/2" - 3/4" - 1"

CONNECTIONS	
SCREWED	ANSI B1.20.1 (NPT) / BS21 (BSP)
SOCKET WELD	ANSI B16.11
FLANGED	ANSI 150#/300#/600#/UNI/DIN

LIMITING CONDITIONS (according to ISO 6552)							
Steam Trap rating	ANSI 300						
PMA: Max allowable pressure	50 bar						
TMA: max allowable temperature	350°C						
PMO: max working pressure	40 bar						
TMO: max working temperature	300°C						
Max. Differential pressure (GD 5)	5 bar						
Max. Differential pressure (GD 14)	14 bar						
Max. Differential pressure (GD 25)	25 bar						
Max. Differential pressure (GD 40)	40 bar						


Douglas Italia reserves the right to carry-out any necessary modification without prior notice

GD WCB

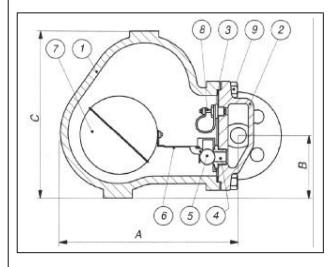

POS.	DESCRIPTION	MATERIALS	SPARES
1	Pody	ASTM A216 WCB	
,	Body		
2	Cover	ASTM A216 WCB	
3	Gasket	316 / GRAPHITE	X
4	Seat	AISI 316	X
5	Valve	AISI 316	X
6	Lever	AISI 316	X
7	Ball float	AISI 316	X
8	Air vent	STAINLESS STEEL	X
9	Bolts	ASTM A193 B7	

						Flanged							
Size (inches)	S	Α	В	С	Weight (Kg)	UNI-DIN PN16-25-40		150#		300#		600#	
						SF	Kg	SF	Kg	SF	Kg	SF	Kg
1/2"	165	238	81	218	13	211	15.2	205	15.2	211	15.5	222	16
3/4"	165	238	81	218	13	215	15.3	207	15.3	211	15.5	230	16.5
1"	165	238	81	218	13	215	16.5	210	16.5	214	16.7	230	17.5

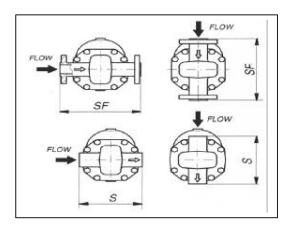

INSTALLATION

The steam trap must be fitted with the float arm in a horizontal plane so that it rises and falls vertically with the flow direction indicated on the body.

HOW TO SERVICE

By installing a new mechanism assembly (4),(5),(6),if necessary also a ball float (7) and a thermostatic air vent (8), you can bring the steam trap to the "as new from factory "condition. This operation is carried out without removing the trap from yhe pipeline. Always fit a new gasket (3) when reassembling.

How to order: i.e. GD 40 WCB ¾" PN 40

DOUGLAS ITALIA S.p.A Località Pradaglie – 29013 CARPANETO PIACENTINO (PC)

OFFICIAL WEB SITE: www.douglas-italia.com